



INTEG O ON-GRID INVERTER

OGT-5/6/8/10/12/15/20/25K
OGT-8/10/12/15K-P



User Manual

ENGLISH VERSION





1	About This Manual	5
1.1	How To Use This Manual.....	5
1.2	Target Groups	5
1.3	Symbols	5
2	Safety Instructions	7
2.1	Safety Notes	7
2.2	Statement	7
3	Product Description.....	9
3.1	System Introduction	9
3.2	Product Introduction	10
3.3	Symbols On the Inverter	13
3.4	Unpacking and Storage	14
4	Installation	16
4.1	Location	16
4.2	Mounting the Inverter	18
5	Electrical Connection	21
5.1	Electrical Wiring Diagram	22
5.2	AC Connection	23
5.3	PV String Connection	26
5.4	Monitoring Device Installation	30
5.5	RMK and CT Installation	31
5.6	Communication Connection	32
6	Commissioning	42
6.1	App Preparation	42
6.2	Inspection Before Commissioning.....	42
6.3	Commissioning Procedure	42
6.4	Stop the Inverter	43

CONTENTS

7	Screen Operation	44
7.1	Main Window.....	44
7.2	General Setting	45
7.3	Advanced Setting	47
7.4	Auto-Test	49
7.5	Reactive Power	49
7.6	Active Power	51
7.7	DI Ctrl	54
8	Monitoring	55
8.1	Monitoring Device	55
8.2	Cloud Monitoring	56
9	Troubleshooting	57
9.1	Error Message	57
9.2	Inverter Maintenance	60
10	Appendix	62
10.1	Technical Parameters.....	62
10.2	Contact Information	70

1 About This Manual

This manual is an integral part of Solinteg OGT-5~25K series three-phase On-Grid inverters (hereinafter referred to as the inverter). It mainly introduces the assembly, installation, electrical connection, debugging, maintenance and troubleshooting of the products.

The products, services or features purchased are subject to the commercial contracts and terms of Solinteg Power Co., Ltd. All or part of the products, services or features described in this document may not be within the scope of purchase. This document serves only as a guide to use, and all statements, information and recommendations in this document do not constitute any express or implied guarantee.

1.1 How To Use This Manual

Before installing and using inverters, please read this manual carefully, understand the safety information and be familiar with the functions and characteristics of inverters.

The manual content of subsequent versions of the inverter may be subject to change. The latest manual can be found at www.solinteg.com.

1.2 Target Groups

This manual is applicable to electrical installers with professional qualifications and end-users, who should have the following skills:

- ① Training for installation and commissioning of the electrical system, as well as dealing with hazards.
- ② Knowledge of the manual and other related documents.
- ③ Knowledge of the local regulations and directives.

1.3 Symbols

Important instructions contained in this manual should be followed during the installation, operation and maintenance of the inverter. They will be highlighted by the following symbols.



DANGER

Indicates a hazard with a high level of risk that, if not avoided, will result in death or serious injury.



WARNING

Indicates a hazard with a medium level of risk that, if not avoided, could result in death or serious injury.



Indicates a hazard with a low level of risk that, if not avoided, could result in minor or moderate injury.



Indicates a situation that, if not avoided, could result in equipment or property damage, data loss, equipment performance degradation.



Indicates additional information, emphasized contents or tips that may be helpful, e.g., to help you solve problems or save time.

2

Safety Instructions

2.1 Safety Notes

- ① Before installation, please read this manual carefully and follow the instructions in this manual strictly.
- ② Installers need to undergo professional training or obtain electrical-related professional qualification certificates.
- ③ When installing, do not open the front cover of the inverter. Apart from performing work at the wiring terminal (as instructed in this manual), touching or changing components without authorization may cause injury to people, damage to inverters and annulment of the warranty.
- ④ All electrical installations must conform to local electrical safety standards.
- ⑤ If the inverter needs maintenance, please contact the local designated personnel for system installation and maintenance.
- ⑥ To use this inverter for power generation needs the permission of the local power supply authority.
- ⑦ The temperature of some parts of the inverter may exceed 60° C during operation. To avoid being burnt do not touch the inverter during operation. Let it cool before touching it.
- ⑧ When exposed to sunlight, the PV array generates dangerous high DC voltage. Please operate according to our instructions, or it will result in danger to life.

2.2 Statement

Solinteg Technologies Co., Ltd. has the right not to undertake quality assurance in any of the following circumstances:

- ① Damages caused by improper transportation.
- ② Damages caused by incorrect storage, installation or use.
- ③ Damages caused by installation and use of equipment by non-professionals or untrained personnel.
- ④ Damages caused by failure to comply with the instructions and safety warnings in this document.
- ⑤ Damages of running in an environment that does not meet the requirements stated in this document.
- ⑥ Damages caused by operation beyond the parameters specified in applicable technical specifications.
- ⑦ Damages caused by unauthorized disassembly, alteration of products or modification of software codes.

- ⑧ Damages caused by abnormal natural environment (force majeure, such as lightning, earthquake, fire, storm, etc.).
- ⑨ Any damages caused by the process of installation and operation which don't follow the local standards and regulations.
- ⑩ Products beyond the warranty period.

3 Product Description

3.1 System Introduction

The OGT-5~25K is a three-phase On-Grid inverter with a power range from 5kW to 25kW. As an integral component in the PV power system, the inverter is designed to convert the direct current power generated from the PV modules into grid-compatible alternating current and feeds the alternating current to the utility grid.

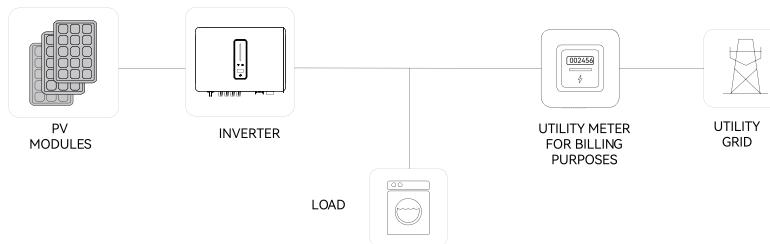


Figure 3-1 Schematic diagram of PV grid-connected system

The applicable grid types for the Solinteg OGT-5~25K series are TN-S, TN-C, TN-C-S, TT and IT. When applied to the TT grid, the voltage of N to PE suggests less than 30V.

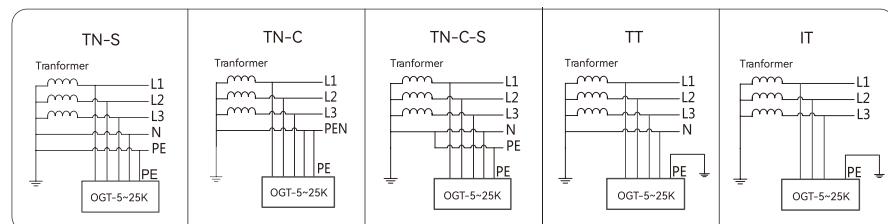


Figure 3-2 Applicable grid types

3.2 Product Introduction

▼ 3.2.1 Models

The OGT-5~25K series inverter includes 12 models which are listed below:

OGT-5K, OGT-6K, OGT-8K, OGT-10K, OGT-12K, OGT-15K, OGT-20K, OGT-25K;
OGT-8K-P, OGT-10K-P, OGT-12K-P, OGT-15K-P

▼ 3.2.2 Appearance

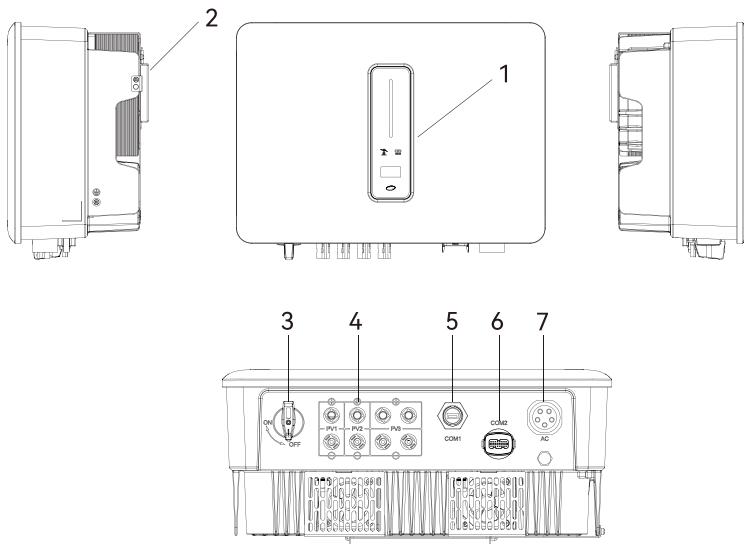


Figure 3-3 Inverter Appearance

Wiring terminals are at the bottom of the inverter, as shown in the table below.

Item	Terminal	Note
1	Display and LED panel	Display the operation information and working status of the inverter.
2	Hanger	Used to hang the inverter on the wall-mounting bracket.
3	DC switch (Optional)	Used to safely disconnect the DC circuit.
4	DC input terminal	PV connector
5	COM1 port	WiFi/LAN/4G module connector
6	COM2 port	<p>There are two versions of the COM2 connector, please select the appropriate version according to the order requirements.</p> <p>Basic version: Only includes RS485 port for connection to data logger or Solinteg RMK (export limit and 24-hour load consumption monitoring function).</p> <p>Extended version: Includes RS485 port for connection to data logger or Solinteg RMK (export limit and 24-hour load consumption monitoring function), RMM (export limit function), and DRED port (for Australia and New Zealand). RCR port (for Germany and some other European countries).</p>
7	AC output terminal	Used for grid output cable connection

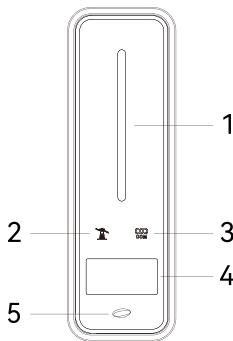
▼ 3.2.3 Indicator

Figure 3-4 Inverter display interface

Item	Indicator	Status		Description
1	Power and Alarm Indicator	Off		No power.
		Blue	Quick flashing	Inverter entered self-test status.
			Slow flashing	Inverter entered waiting status.
			Breathe flashing	Inverter works normal.
		Red	Always on	An alarm or fault is detected, view the fault info on the display.
2	Grid Indicator	Off	Grid lost.	
		Slow flashing	Inverter detected grid but not running in on-grid mode.	
		Always on	Inverter works in on-grid mode.	
3	Communication Indicator	Green	Always on	The inverter communication is running normally.
		Green	Flashing	The inverter communicates with datalogger or Solinteg RMK through RS485.
4	Display	Display off to save power, press the button to wake up the display.		
5	Button	Switch display information and set parameters by short press or long press.		

3.3 Symbols On the Inverter

Symbol	Description
	To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end-users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.
	Please read the instructions carefully before installation.
	Do not touch any internal parts of the inverter within 10 minutes of disconnecting the power and PV input.
	CE mark, the inverter complies with the requirements of the applicable CE guidelines.
	Danger. Risk of electric shock!
	The surface is hot during operation and do not touch.
	Additional grounding point.
	TÜV mark of conformity.









3.4 Unpacking and Storage

The device is thoroughly tested and strictly inspected before delivery. Nonetheless, damage may still occur during shipping. For this reason, please conduct a thorough inspection after receiving the device.

Contact Solinteg or the transport company in case of any damages or incompleteness and provide photos to facilitate services.

▼ 3.4.1 Packing List

The package of the inverter includes the following accessories. Please check whether the accessories in the packing box are complete when receiving the goods.

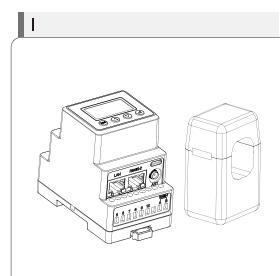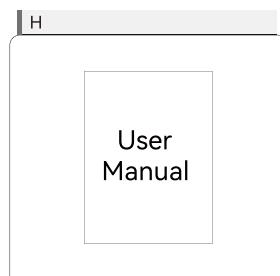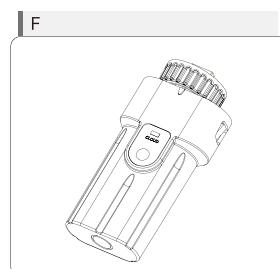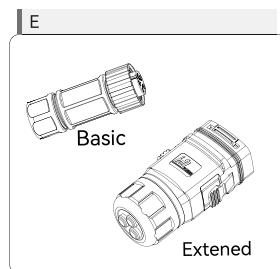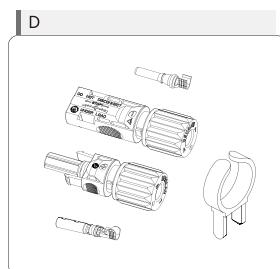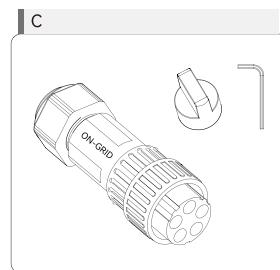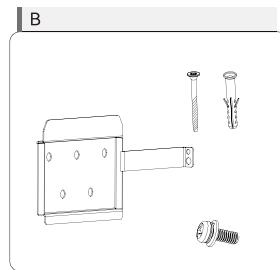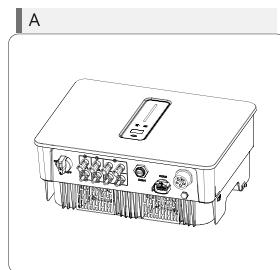

Item	Name and Quantity	Note
A	Inverter (1pcs)	
B	Wall-mounting bracket (1pcs), Expansion plug set (5pcs), M5 screws (1pcs)	
C	On-grid connector set (1pcs), AC Locking Tool(1pcs) Allen Key(1pcs)	
D	PV terminal(2/3/4 pairs),Unlocking tool	OGT-5/6/8/10K(2pairs) OGT-8/10K-P , OGT-12/15K(3pairs) OGT-12/15K-P , OGT-20/25K (4pairs)
E	COM2 connector set (1pcs) *	Two versions
F	Monitoring device (1pcs)	
G	PE terminal (1pcs)	
H	User guide	
I	Solinteg RMM/RMK with 3 CTs	Optional

*There are two versions of the COM2 connector, please select the appropriate version according to the order requirements.

Basic version: Only includes RS485 port for connection to data logger or Solinteg RMK (export limit and 24-hour load consumption monitoring function).

Extended version: Includes RS485 port for connection to data logger or Solinteg RMK (export limit and 24-hour load consumption monitoring function),RMM (export limit function), and DRED port (for Australia and New Zealand).RCR port (for Germany and some other European countries).

▼ 3.4.2 Inverter Storage

- ① Do not dispose of the original packing case. It is recommended to store the device in the original packing case when the device is decommissioned.
- ② The storage temperature and humidity should be in the range of -30°C and+ 60°C, and less than 90%, respectively.
- ③ If a batch of inverters needs to be stored, the height of each pile should be no more than 8 levels.

4 Installation

4.1 Location

The Solinteg OGT-5~25K series inverters are designed with IP66 protection enclosure for indoor and outdoor installations. When selecting an inverter installation location, the following factors should be considered:

- ① The wall on which the inverters mounted must be able to withstand the weight of the inverter.
- ② The inverter needs to be installed in a well-ventilated environment.
- ③ Do not expose the inverter directly to strong sunlight to prevent excessive temperature operation. The inverter should be installed in a place with shelter to prevent direct exposure to sunlight and rain.
- ④ Install the inverter at eye level for easy inspection of screen data and further maintenance.
- ⑤ The ambient temperature of the inverter installation location should be between -30°C and 60°C.
- ⑥ The surface temperature of the inverter may reach up to 75°C. To avoid risk of burns, do not touch the inverter while it's operating and inverter must be installed out of reach of children.

▼ 4.1.1 Installation location

Select an optimal mounting location for safe operation, long service life and expected performance.

- ① The inverter with protection rating IP66 can be installed both indoors and outdoors.
- ② Install the inverter at a place convenient for electrical connection, operation, and maintenance.

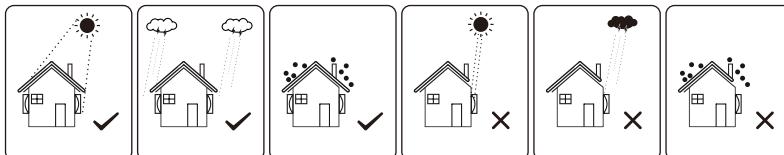


Figure 4-1 Recommended installation location



WARNING

Do not put flammable and explosive articles around the inverter.

▼ 4.1.2 Installation Spacing

Reserve enough clearance around the inverter to ensure sufficient space for heat dissipation.

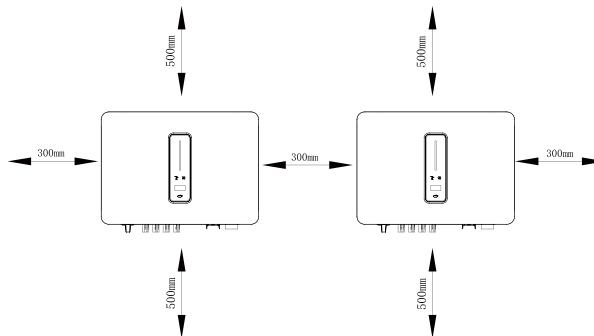


Figure 4-2 Recommended installation spacing

▼ 4.1.3 Installation Angle

Install the inverter vertically. Never install the inverter horizontally, or at forward/backward tilted, or upside down.

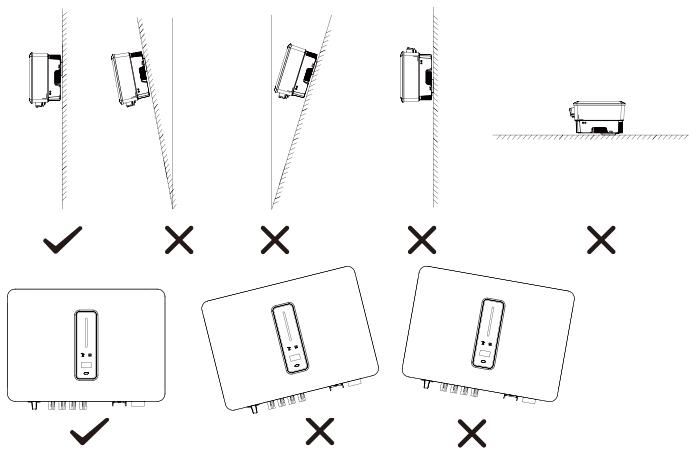


Figure 4-3 Permitted and prohibited mounting positions

4.2 Mounting the Inverter

▼ 4.2.1 Wall Bracket Installation

Dimensions of wall bracket (mm)

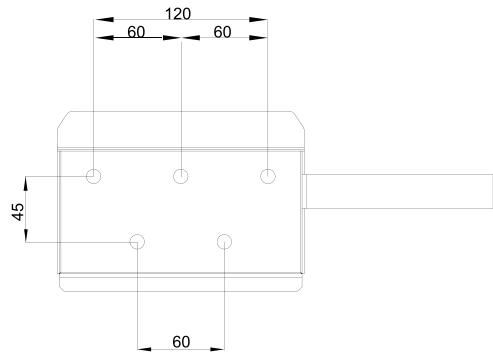


Figure 4-4 Dimensions of wall bracket

① Use the wall bracket as the template to mark the position of 5 holes on the wall.

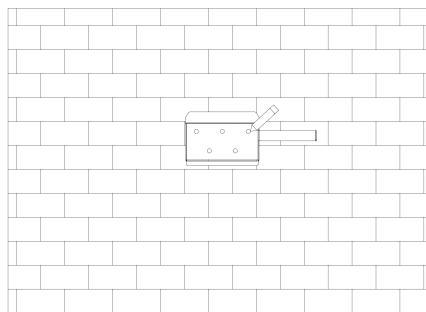


Figure 4-5 Marking hole position using installation bracket

② Use an electrical driller with 10mm diameter bit to drill 5 holes in the wall with 80mm depth.



Before drilling, make sure to avoid any buried water tube and electric wires in the wall.

③ Insert the expansion tubes into the holes and tighten them, then fix the bracket onto the wall with expansion screws by using a cross screwdriver.

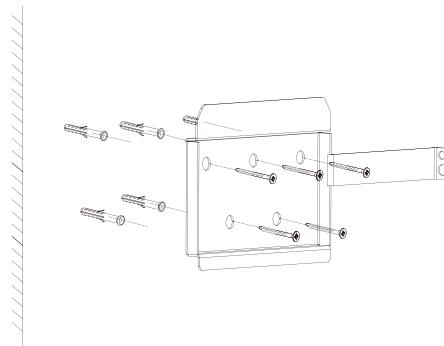


Figure 4-6 Fixing the wall bracket

▼ 4.2.2 Mounting the Inverter

Lift the inverter, hang the back rail on the fixed wall bracket carefully. Secure the inverter with M5 screws.

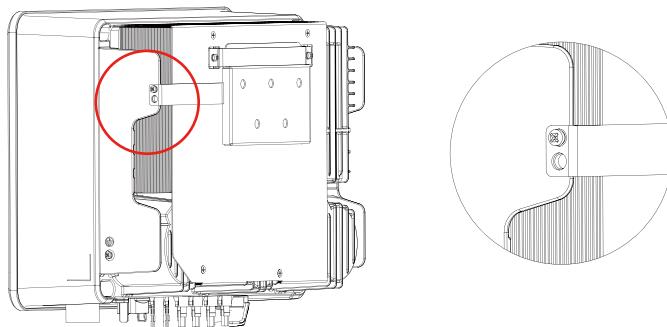


Figure 4-7 Mounting the inverter

▼ 4.2.3 External Ground Connection

Connect the inverter and ground bar through PE wire to achieve the purpose of grounding protection. Please always remember to wiring the PE wire before wiring other wires.



DANGER

Do not connect the N-wire as a protective ground wire to the inverter casing. Otherwise, it may cause electric shock.



Reliable grounding is good for resisting surge voltage shock and improving EMI performance.

Inverters must be well-grounded.

For a system with only one inverter, just ground the PE cable.

For a multi-inverter system, all inverters PE wire need to be connected to the same grounding copper bar to ensure equipotential bonding.

Ground terminal connection steps:

- ① The external grounding terminal is located on the lower right side of the inverter.
- ② Fix the grounding terminal to the PE wire with a proper tool and lock the grounding terminal to the grounding hole in the lower right side of the inverter.

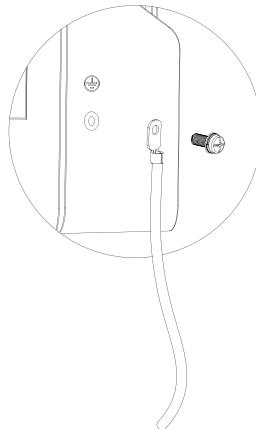


Figure 4-8 Grounding terminal connection

5 Electrical Connection

**DANGER**

A high voltage in the conductive part of the inverter may cause an electric shock. When installing the inverter, make sure that the AC and DC sides of the inverter are completely de-energized.

**DANGER**

Do not connect the N-wire as a protective ground wire to the inverter casing. Otherwise, it may cause electric shock.

**WARNING**

Do not ground the positive or negative pole of the PV string, otherwise it will cause serious damage to the inverter.

**WARNING**

Static may cause damage to the electronic components of the inverter. Anti- static measures should be taken during installation and maintenance.

**NOTICE**

Do not use other brands or other types of terminals other than the terminals in the accessory package. Solinteg has the right to refuse all damages caused by the mixed-use of terminals.

**NOTICE**

Moisture and dust can damage the inverter, ensure the cable gland is securely tightened during installation. The warranty claim will be invalidated if the inverter is damaged as a result of a poorly connected cable connector.

5.1 Electrical Wiring Diagram

This diagram shows Solinteg OGT-5~25K series inverter wiring structure and composition, concerning the real project, the installation and wiring have to be in line with the local standards.

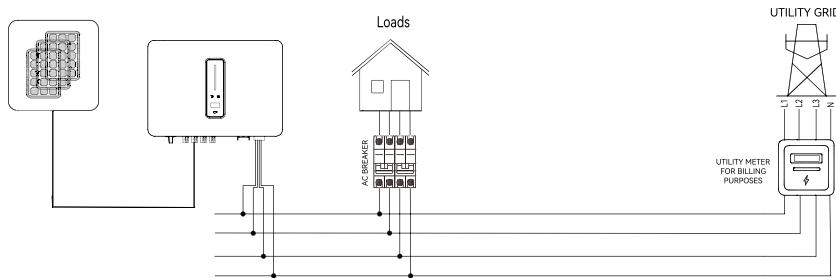


Figure 5-1 Electrical wiring diagram

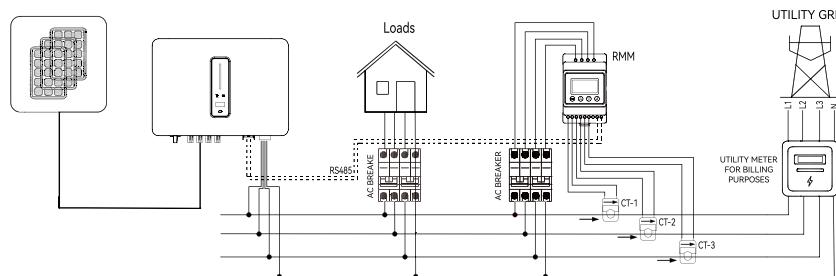


Figure 5-2 Electrical wiring diagram of export limit

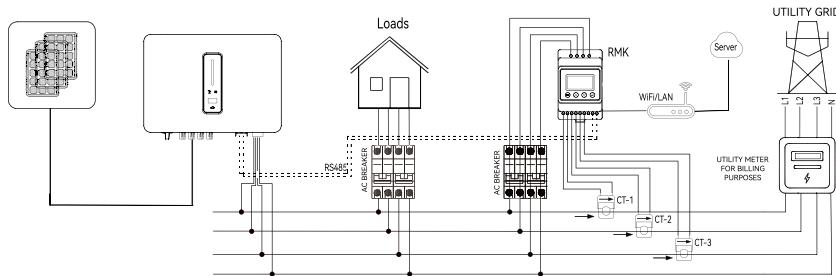


Figure 5-3 Electrical wiring diagram of export limit & 24 hours load consumption monitoring

5.2 AC Connection

▼ 5.2.1 AC Side Requirements



NOTICE

- ① An independent AC breaker is required on AC output side, and any loads cannot be connected with inverter directly.
- ② Before making the connection of AC cable, please confirm all DC & AC power sources are disconnected from the inverter.
- ③ The Solinteg OGT-5~25K series three-phase inverter applies to the three-phase power grid with a voltage of 230/400V and a frequency of 50/60Hz.
- ④ Connect the inverter to the grid only after getting approval from the local electric power company.

A three-phase AC breaker needs to be installed on the AC side of the OGT-5~25K. To ensure that the OGT-5~25K can safely disconnect itself from the power grid when an exception occurs, select a proper overcurrent protection device in compliance with local power distribution regulations and Max. input (output) current of OGT-5~25K side.

The allowable AC cable of wire diameter and cross-sectional area for Solinteg OGT-5~25K are as shown in the following:

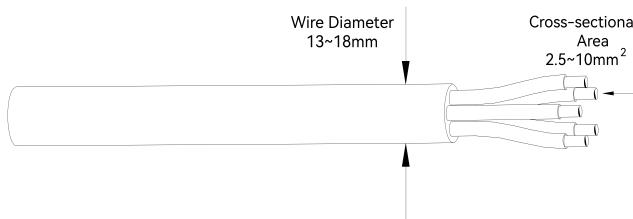


Figure 5-4

AC output side uses a five-core cable (3L, N, and PE).



NOTICE

Determine whether an AC circuit breaker with greater overcurrent capacity is required based on actual conditions.

Residual Current Monitoring Device

With an integrated universal current-sensitive residual current monitoring unit, the inverter will disconnect immediately from the mains power once a fault current with a value exceeding the limit is detected.

However, if an external residual current device (RCD) is mandatory, the switch must be triggered at a residual current of 300 mA (recommended), or it can be set to other values according to local regulations. For example, in Australia, the inverter can use an additional 30mA (type A) RCD in installations.

▼ 5.2.2 Assembling the AC Connector

The AC terminal block is on the bottom side of the inverter.

① Take the AC connector out of the accessory bag and disassemble it.

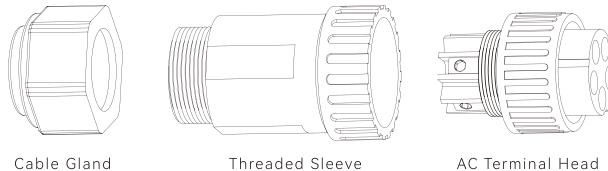


Figure 5-5

② According to the figure 5-4, select an appropriate cable, peel the insulation sleeve of AC cable off for 50mm, and peel off the end of 3L /PE / N wires for 8mm.

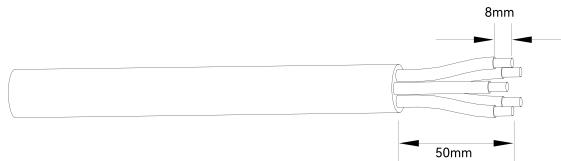


Figure 5-6

③ Insert the stripped end of the three wires into the appropriate hole of the terminal head. Please try to pull out the cable to make sure it is well connected.

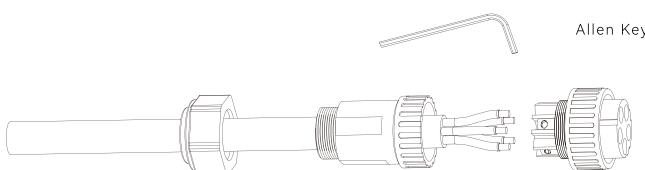


Figure 5-7



The cord end terminals must be locked tightly, and make sure it won't be loose after a long period of use.

④ According to the arrow direction push the threaded sleeve to make it connected with the AC terminal head and then rotate the cable gland clockwise to lock it. According to the arrow direction push the AC Locking Tool to make it connected with the AC terminal head and then rotate the AC Locking Tool counterclockwise to lock AC terminal head.

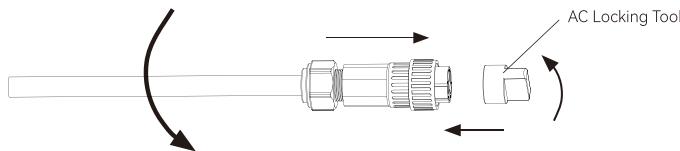


Figure 5-8

▼ 5.2.3 Installing the AC Connector



High voltage may be present in inverter!

Ensure all cables are voltage-free before electrical connection.

Do not connect the AC circuit breaker until all inverter electrical connections are completed.

Connect the AC connector to the inverter AC terminal, and the slight click shows that the connection is in place.

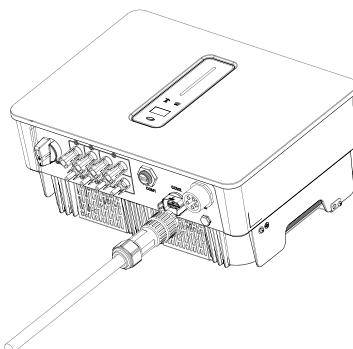


Figure 5-9

5.3 PV String Connection



High voltage may be present in the inverter!

Ensure all cables are voltage-free before performing electrical operations.

Do not connect the DC switch and AC circuit breaker before finishing electrical connection.



For best practice, ensure PV modules of the same model and specifications are connected in each string.

Make sure the maximum output voltage of each PV string does not exceed 950V.



When the photovoltaic array is exposed to light, it supplies a d.c. voltage to the inverter.

▼ 5.3.1 PV Side Requirements

System Layout of Units with external DC Switch

- ① Local standards or codes may require PV systems that fit with an external DC switch on the DC side. The DC switch must be able to safely disconnect the open-circuit voltage of the PV array plus a safety reserve of 20%. Install a DC switch to each PV string to isolate the DC side of the inverter.
- ② The DC switch has to be certified by AS 60947.3:2018 and AS/NZS IEC 60947.1:2020 in Australia and New Zealand market. The Max. current of the DC switch matching with OGT-5~25K inverter is no less than 40A. We recommend the following electrical connection.

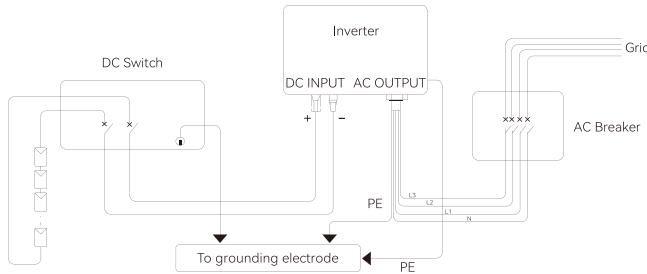


Figure 5-10

Select the appropriate photovoltaic cable

Cable requirements		Cable stripping length
Outside diameter	Conductor core section	
5.9~8.8 mm	4 mm ²	7 mm

▼ 5.3.2 Assembling the PV Connector**WARNING**

- ① Before assembling the PV connector, make sure that the cable polarity is correct.
- ② Use a multimeter to measure the voltage of the PV input string, verify the polarity of the PV input cable, and ensure that each string voltage is within 950V.

① Peel off the DC cable insulation sleeve for 7 mm.



Figure 5-11

② Disassemble the connector in the accessory bag.

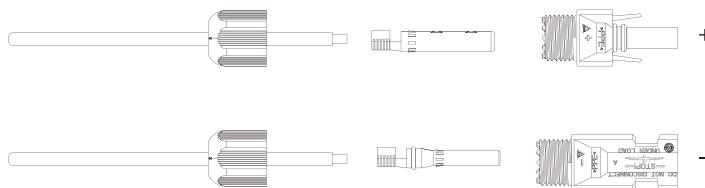


Figure 5-12

③ Insert the DC cable through the DC connector nut into the metal terminal and press the terminal with a professional crimping plier (pull back the cable with some power to check if the terminal is well connected to the cable).

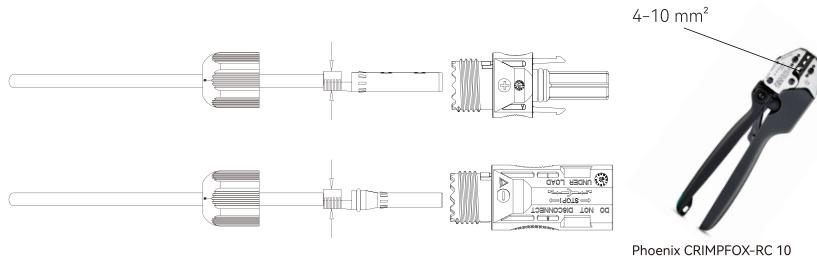


Figure 5-13

④ Insert the positive and negative cables into the corresponding positive and negative connectors, pull back the DC cable to ensure that the terminal is tightly attached in the connector.

⑤ Use an open-end wrench to screw the nut to the end to ensure that the terminal is well sealed.

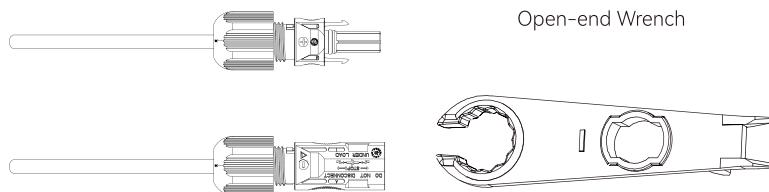


Figure 5-14

▼ 5.3.3 Installing the PV Connector

① Rotate the DC switch to “OFF” position.

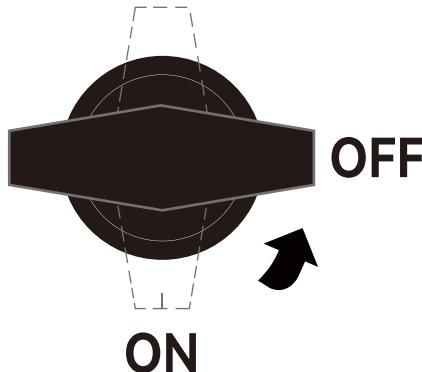


Figure 5-15

② Check the cable connection of the PV string for polarity correctness and ensure that the open circuit voltage in any case does not exceed the inverter input limit of 950V.

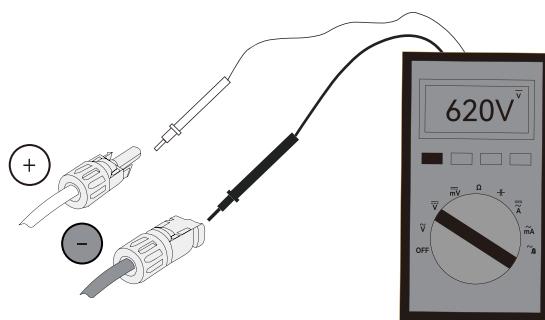


Figure 5-16

③ Insert the positive and negative connectors into the inverter PV input terminals respectively, a click sound should be heard if the terminals are well connected.

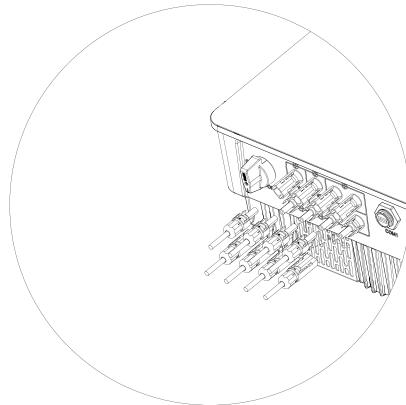


Figure 5-17

④ Seal the unused PV terminals with the terminal caps.

▼ 5.3.4 Remove the PV Connector

Please use the unlocking tool to remove the PV connector.

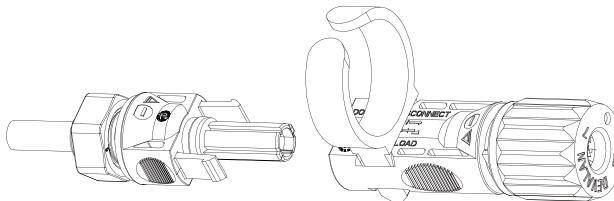


Figure 5-18

5.4 Monitoring Device Installation

Solinteg OGT-5~25K series On-Grid inverter supports WIFI, LAN, and 4G communication. Plug the WIFI, LAN, or 4G module into the COM1 port at the bottom of inverter. A slight "click" sound during the installation represents that the assembly is in place.



Refer to "8 Monitoring" for more information.

5.5 RMM/RMK and CT installation

The current Transformer, also called CT, is installed on the L wire between the house loads and the power grid.

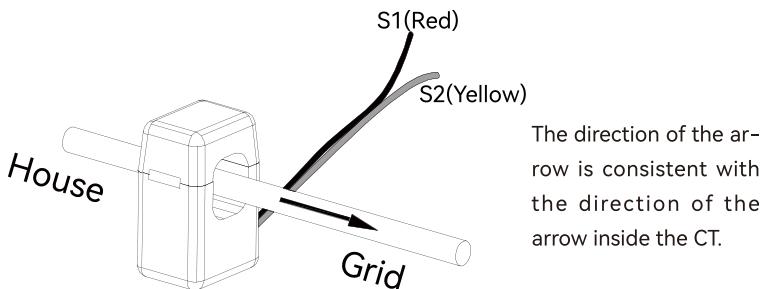


Figure 5-19 CT Direction

The RMM/RMK can be installed in the AC combiner box or other places that are unable to be touched by children. Solinteg CT cable is fixed and can't be extended.

The CT has been connected to the Solinteg RMM/RMK when you received them, and you just need to follow the wiring diagram in the RMM/RMK to connect CTs.



CT installation direction should strictly follow the instruction in the user manual, otherwise, the inverter may not be working normally.
The CT has to be corresponding with the port in the RMM/RMK, and the connection between CT and RMM/RMK needs to be reliable, otherwise, the CT measurement accuracy may be affected.



Please choose the appropriate CT size according to your needs.

RMM/RMK terminals definition as shown in table below:

No.	Definition	Function
1	L1	L1/L2/L3/N connect to grid to detect power grid voltage. To detect the CT current and direction.
2	L2	
3	L3	
4	N	
5	L1-S1	
6	L1-S2	
7	L2-S1	
8	L2-S2	
9	L3-S1	
10	L3-S2	
11	PE	Ground Connection
RS485-1		Communicate with three-phase PV grid-connected inverter.
RS485-2		Communicate with hybrid inverter.

**NOTE**

For more installation and setup information about RMM/RMK, please refer to the RMM/RMK user manual.

5.6 Communication connection

▼ 5.6.1 Basic version

Only includes RS485 port for connection to data logger or Solinteg RMK (export limit and 24-hour load consumption monitoring function).

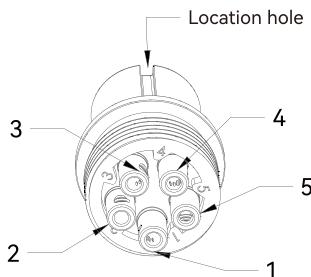


Figure 5-20

Pin	Definition	Function
1	RS485-A1	
2	RS485-B1	① Communicate with Solinteg RMK for export limit & 24 hours load consumption monitoring.
3	RS485-A1	② In case of multiple inverters, all the inverters can be daisy-chained via RS485 cables.
4	RS485-B1	
5	/	Reserved

It is recommended to use the RS485 communication cable with a crosssectional area of 0.75-1.5mm² and an outer diameter of 7mm-11mm.

RS485 cable requirements: Shielded twisted-pair cable or shielded twisted Ethernet cable.

① Take the communication connector out of the accessory bag and disassemble it.

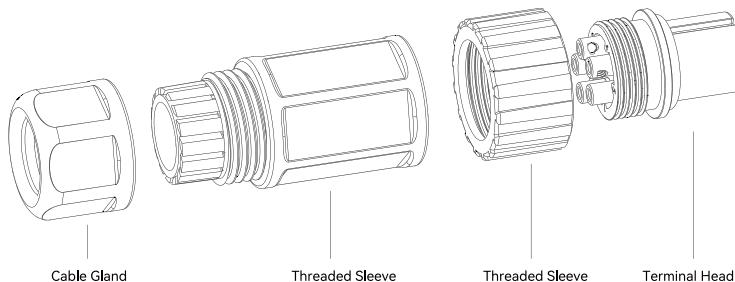


Figure 5-21

② Remove the cable jacket and strip the wire insulation.

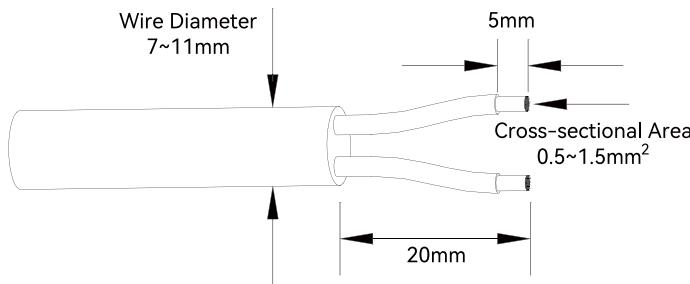


Figure 5-22

③ (Optional) When using a multi-core multi-strand copper wire cable, connect the AC wire head to the cord end terminal (hand-tight). In case of single-strand copper wire, skip this step.

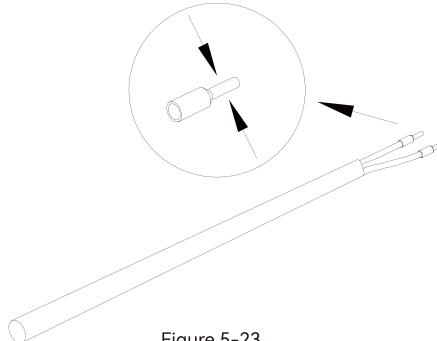


Figure 5-23

④ Insert the stripped end of the three wires into the appropriate hole of the terminal head. Please try to pull out the cable to make sure it is well connected.

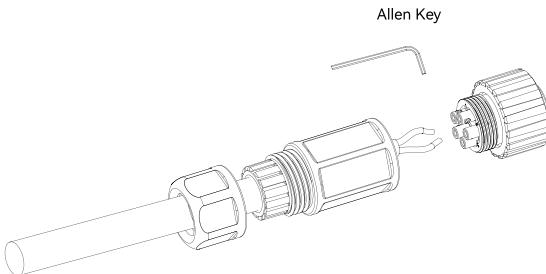


Figure 5-24

⑤ According to the arrow direction push the threaded sleeve to make it connected with the terminal head and then rotate the cable gland clockwise to lock it.

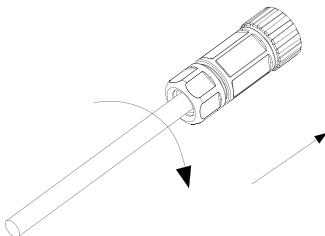


Figure 5-25

⑥ Connect the connector to the inverter communication terminal.

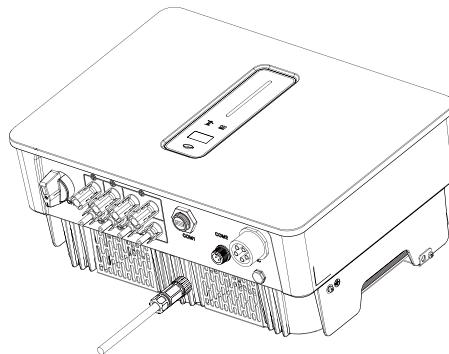


Figure 5-26

▼ 5.6.2 Extended version

Includes RS485 port for connection to data logger or Solinteg RMK (export limit and 24-hour load consumption monitoring monitoring function), Solinteg RMM(export limit)and DRED port (for Australia and New Zealand).RCR port (for Germany and some other European countries).

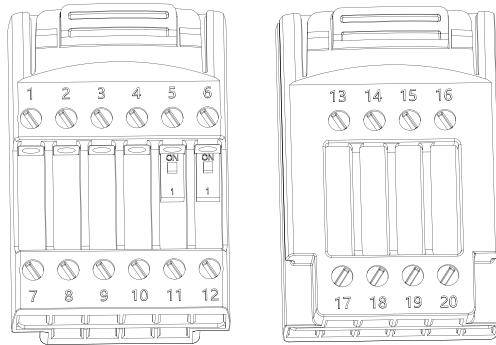


Figure 5-27

Pin	Definition	Function
1	RS 485 A2	Communicate with Solinteg RMM for export limit
2	RS 485 B2	
3	Fast stop +	Reserved
4	Fast stop -	
5	Dipswitch-1	DRED resistor dipswitch between 15(COM D/0) and 16(REF D/0)
6	Dipswitch-2	120Ω terminating resistor dipswitch between RS 485 A1 and RS 485 B1
7	/	/
8	/	
9	RS 485 A1	① Communicate with Solinteg RMK for export limit & 24 hours load consumption monitoring. ② In case of multiple inverters, all the inverters can be daisy-chained via RS485 cables.
10	RS 485 B1	
11	RS 485 A1	
12	RS 485 B1	
13	/	Reserved
14	/	
15	COM D/0	DRED For Australia and New Zealand RCR For Germany and some other European countries
16	REF D/0	
17	DRM4/8	
18	DRM3/7	
19	DRM2/6	
20	DRM1/5	

**NOTE**

DRED/RCR interface is special reserved for Australia and New Zealand/
Germany and some other European countries
according to their safety regulation, and Solinteg doesn't provide the
DRED/RCR device for the customer.

① Unscrew the swivel nut from the connector.

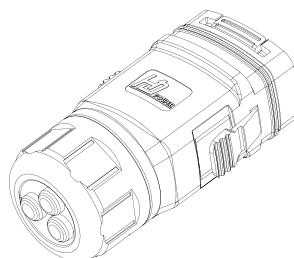


Figure 5-28

② Take out the terminal block.

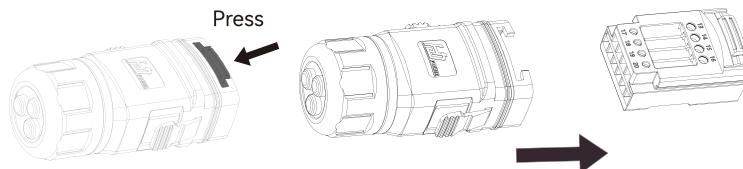


Figure 5-29

③ Remove the seal and lead the cable through the cable gland.

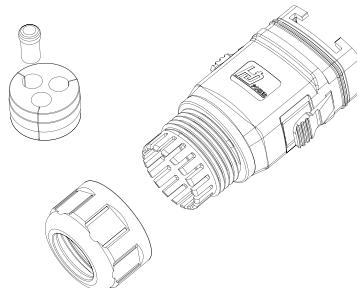


Figure 5-30

④ Thread the cable of appropriate length through the swivel nut and the housing. Remove the cable jacket and strip the wire insulation.

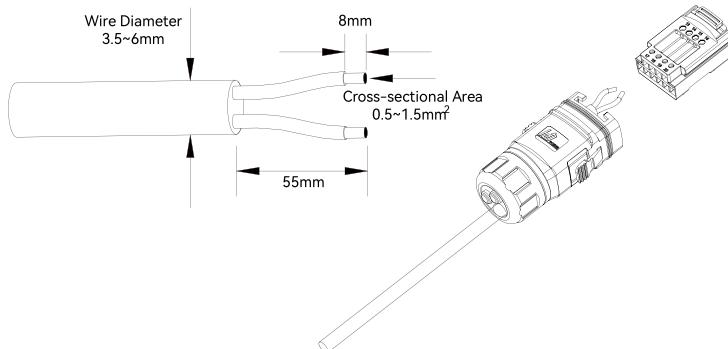


Figure 5-31

⑤ (Optional) When using a multi-core multi-strand copper wire cable, connect the AC wire head to the cord end terminal (hand-tight). In case of single-strand copper wire, skip this step.

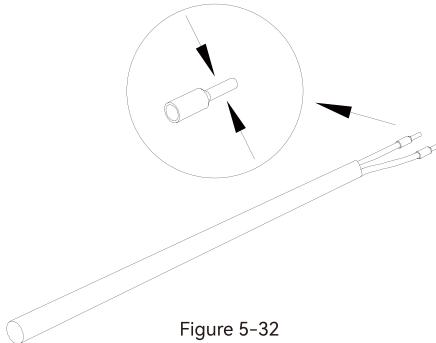


Figure 5-32

⑥ Fix all the wires to the terminal plug according to the assignment and tighten to a torque of $1.2\text{+/-}0.1\text{N}\cdot\text{m}$ with a screwdriver.

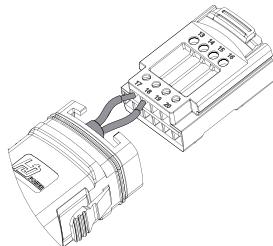


Figure 5-33

⑦ Pull the wires outward to check whether they are firmly installed. Insert the terminal block into the connector until it snaps into place with an audible click.

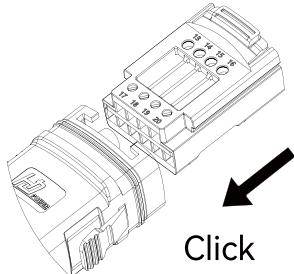


Figure 5-34

⑧ Fasten the swivel nut.

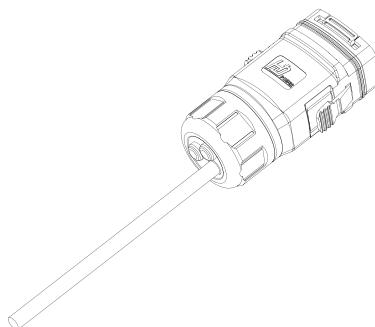


Figure 5-35

⑨ Remove the waterproof lid from the COM terminal. Insert the COM connector into COM terminal on the bottom of the inverter until there is an audible click.

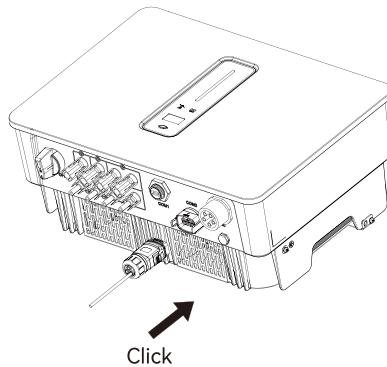


Figure 5-36

▼ 5.6.3 DI ctrl

DRM and Ripple Control support only one function at the same time.

DRM

DRED (Demand Response Enabling Device) interface is special reserved for Australia and New Zealand according to their safety regulation, and Solinteg doesn't provide the DRED device for the customer. The inverter supports the demand response modes as specified in the standard AS/NZS 4777. The inverter has integrated a terminal block for connecting to a DRED.

DRED wiring diagram (hybrid inverter) as below:

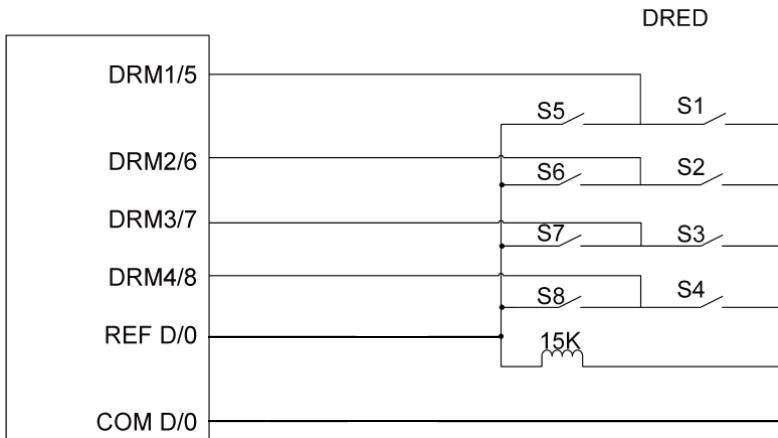


Figure 5-37

DRED mode as shown in table below:

Mode	Function
DRM 0	Operate the disconnection device
DRM 5	Do not generate power
DRM 6	Do not generate at more than 50% of rated power
DRM 7	Do not generate at more than 75% of rated power and sink reactive power if capable.
DRM 8	Increase power generation (subject to constraints from other active DRMs)
Priority	DRM1 > DRM2 > DRM3 > DRM4 DRM5 > DRM6 > DRM7 > DRM8



There is a resistor between 15(COM D/0) and 16(REF D/0), do not move the resistor while wiring.

RCR

RCR (Ripple Control Receiver) interface is special reserved for Germany and some other European country according to their safety regulation, and Solinteg doesn't provide the RCR device for the customer.

In Germany and some European areas, a ripple control receiver is used to convert a power grid dispatching signal to a dry contact signal. The dry contact is required for receiving the power grid dispatching signal.

RCR wiring diagram as below:

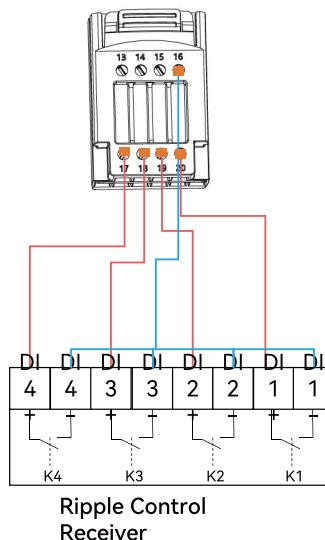


Figure 5-38

RCR operation mode as shown in table below:

Switch mode (External RCR device)	Feed-in output power (in % of the Rated AC output power)
K1 turn on	100%
K2 turn on	60%
K3 turn on	30%
K4 turn on	0%

RCR priority: K1<K2<K3<K4

6 Commissioning

6.1 App Preparation

- ① Install the Cloud monitoring App with latest version. Refer to "8.2 Cloud monitoring App."
- ② Register an account on the Monitoring APP. If you have got the account and password from the distributor/installer or Solinteg, skip this step.

6.2 Inspection before Commissioning

Check the following items before starting the inverter:

- ① All equipment has been reliably installed.
- ② DC switch and AC circuit breaker are in the "OFF" position.
- ③ The ground cable is properly and reliably connected.
- ④ The AC cable is properly and reliably connected.
- ⑤ The DC cable is properly and reliably connected.
- ⑥ The communication cable is properly and reliably connected.
- ⑦ The vacant terminals are sealed.
- ⑧ No foreign items, such as tools, are left on the top of the machine or in the junction box (if there is).
- ⑨ The AC circuit breaker is selected in accordance with the requirements of this manual and local standards.
- ⑩ All warning signs & labels are intact and legible.

6.3 Commissioning Procedure

If all of the items mentioned above meet the requirements, proceed as follows to start up the inverter for the first time.

- ① Turn on the AC breaker.
- ② Turn on the DC switch, the DC switch may be integrated in the inverter or installed by the customer.
- ③ The inverter will work properly after turning on the DC and AC breakers on the condition the weather and grid meet requirements. The time for entering the operating mode may vary according to the chosen safety code.
- ④ Observe the LED indicator to ensure that the inverter operates normally.
- ⑤ After the inverter is started, please refer to the [QUICK USE GUIDE] which is attached to the access to configure the inverter.



NOTE

If the inverter does not work properly, check the country code Settings. Select the safety code suitable for the country (region) where the inverter is installed.

6.4 Stop the Inverter

When turning off the inverter, please follow the steps below:

- ① Shut down the inverter through the APP or the button on the display first.
- ② Disconnect the breakers on the grid and load side.
- ③ Wait 30 seconds and then turn the inverter DC switch to the “OFF” position. At this time, there is remaining power in the inverter capacitor. Wait for 10 minutes until the inverter is completely de-energized before operating.
- ④ Disconnect the AC and DC cables.

7


Operation

When the inverter is turned on, the following interfaces will be displayed on the OLED display, and the OLED display allows the user to check various operation information and to modify the settings of the inverter.



If the parameter is a number, short press to change the number, long press to confirm the number and jump to the next number.
Please wait for 10 seconds and the inverter will automatically save your settings or modifications.

7.1 Main Window

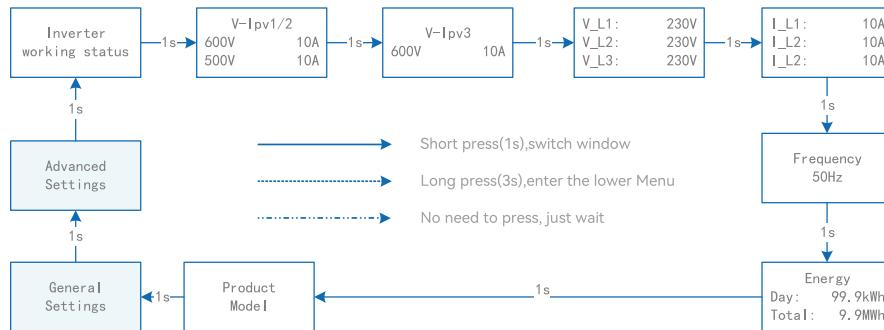


Inverter working status:
Waiting/Checking/On-Grid/Off-Grid/Fault Info/FW Updating

Inverter Display Abbreviation and Complete Name Reference Table

Abbreviation	Complete Name
V-Ipv1/2/3	PV input voltage and current of each MPPT
V_L1: / V_L2: / V_L3:	Three-phase AC voltage
I_L1: / I_L2: / I_L3:	Inverter output current
FW Updating	Firmware Updating

7.2 General Setting

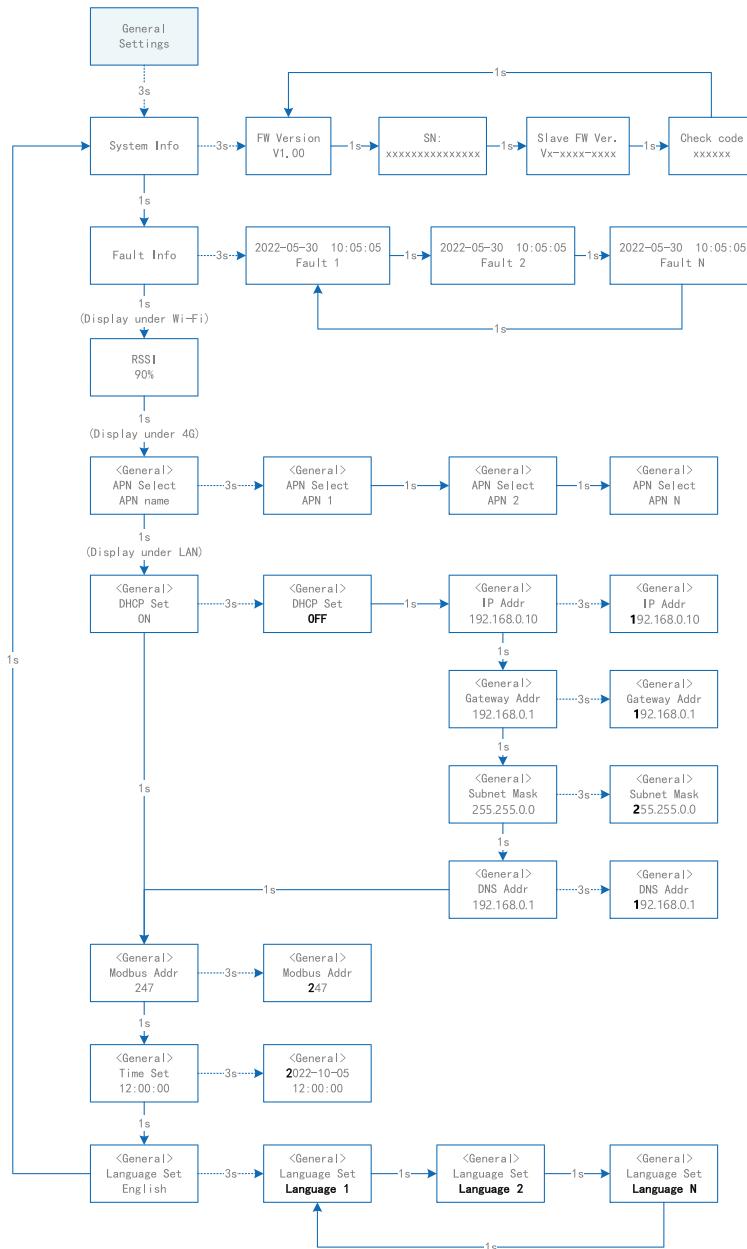



Inverter Display Abbreviation and Complete Name Reference Table

Abbreviation	Complete Name
System Info	System information
FM Version	Firmware version
SN	Series number
Slave FW Ver.	Slave Firmware version(Not editable)
Fault Info	Fault information
RSSI	Received signal strength indicator
DHCP Set	Enable or disable DHCP functionality
IP Addr	If DHCP is turned off, set the static IP address
Gateway Addr	If DHCP is turned off, set the Gateway IP address
Subnet Mask	If DHCP is turned off, set the subnet mask
DNS Addr	If DHCP is turned off, set the domain name server address
Modbus Addr	Modbus address

7.3 Advanced Setting

- ① When you enter the advanced settings for the first time, the initial password is 0000, and the inverter is required to change the password.
- ② Later, when entering the advanced settings, if you forget the password, short press the button 3 times then long press 3s to reset the password.

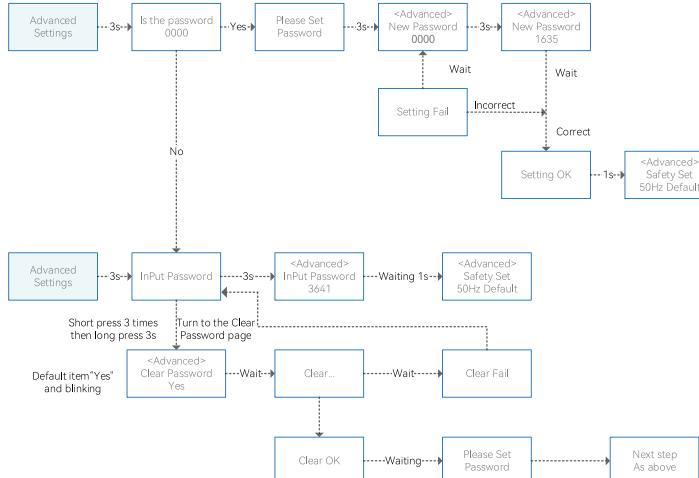

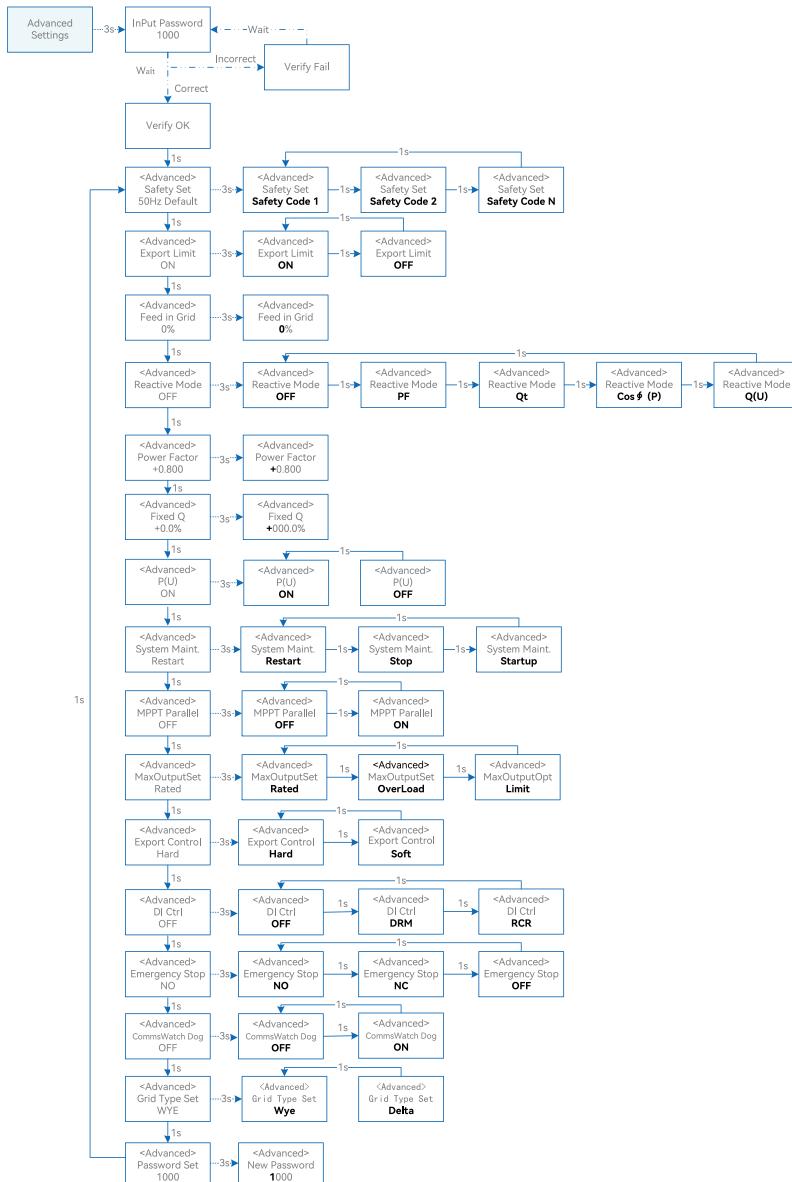

*Please contact Solinteg service team for password.

Inverter Display Abbreviation and Complete Name Reference Table

Abbreviation	Complete Name
Safety Set	Select the code that meet local regulatory requirements
Export Limit	On-grid export limit function switch
Feed in Grid	Set the percentage of the power that is allowed to feed to the grid
Reactive Mode	Reactive power mode selection. The inverter can output reactive power in the following modes: OFF: Disable this function. PF: The reactive power can be regulated by the parameter PF (Power Factor) Qt: The reactive power can be regulated by the parameter Q-Var limits (in %) Cos(φ)P: The PF changes with the output power of the inverter Q(U): The reactive power changes with the grid voltage The specific parameters for reactive power modes can be set through the monitoring platform or APP.
Power Factor	In PF mode of reactive mode, the inverter inputs reactive power according to the set power factor.
Fixed Q	In Qt mode of reactive mode, the inverter outputs a fixed value of reactive power.
P(U)	P(U) curve switch
System Maint.	The inverter outputs active power based on the changes in the grid voltage.
MPPT Parallel	If MPPT is connected in parallel, enable this function.
MaxOutputSet	Select the maximum AC output power. Rated, Max. output power= Rated output power on the datasheet Overload, Max. output power> Rated output power on the datasheet Limit, Max. output power < Rated output power on the datasheet
Export Control	In the power export limit on mode, when the communication between the inverter and RMM/RMK the inverter and datalogger is interrupted, select the inverter operation mode from one of the follows: Hard, inverter stops Soft, inverter generates power as the "Feed in Grid" value set on the screen
DI Ctrl	Select the control mode for the digital input signal, OFF: Disable DRM: Demand Response Modes(for Australia and New Zealand). RCR: Ripple Control Receiver (for Germany and some other European countries).
Emergency Stop	OFF: Disabled (requires software enable). NO: Normally Open.The emergency stop switch is normally open; when the switch is closed, the inverter stop AC output. NC: Normally Closed. The emergency stop switch is normally closed; when the switch is opened, the inverter stop AC output.
CommsWatchDog	In a master-slave parallel system, when the function is turned on, the inverter stops working when communication with the master is lost.

7.4 Country Code (Safety Code) Setting


Please set "Country code (Safety code)" under the menu "Safety Set" in "Advanced Settings".

Refer to "7.3 Advanced Setting" for more information.

7.5 Auto-Test

This function is disabled by default and will be only enabled in the safety code of Italy. Short press the button several times until "Auto Test CEI 0-21" displays on the screen, press and hold the button for 3 seconds to activate "Auto Test". After the auto test is finished, short press the button several times until the screen displays "Auto Test Record", and hold the button 3 seconds to check the test results.

The auto test will start when the correct test item is selected, and the test result will be displayed on the screen when it finished. If the test was successful, it will display "Test Pass", otherwise will display "Test Fail". After each item tested, the inverter will reconnect to the grid and automatically start the next test according to the requirements of CEI 0-21. Connect the AC cable, auto test will start after the inverter connected to the grid, see the operation steps below:

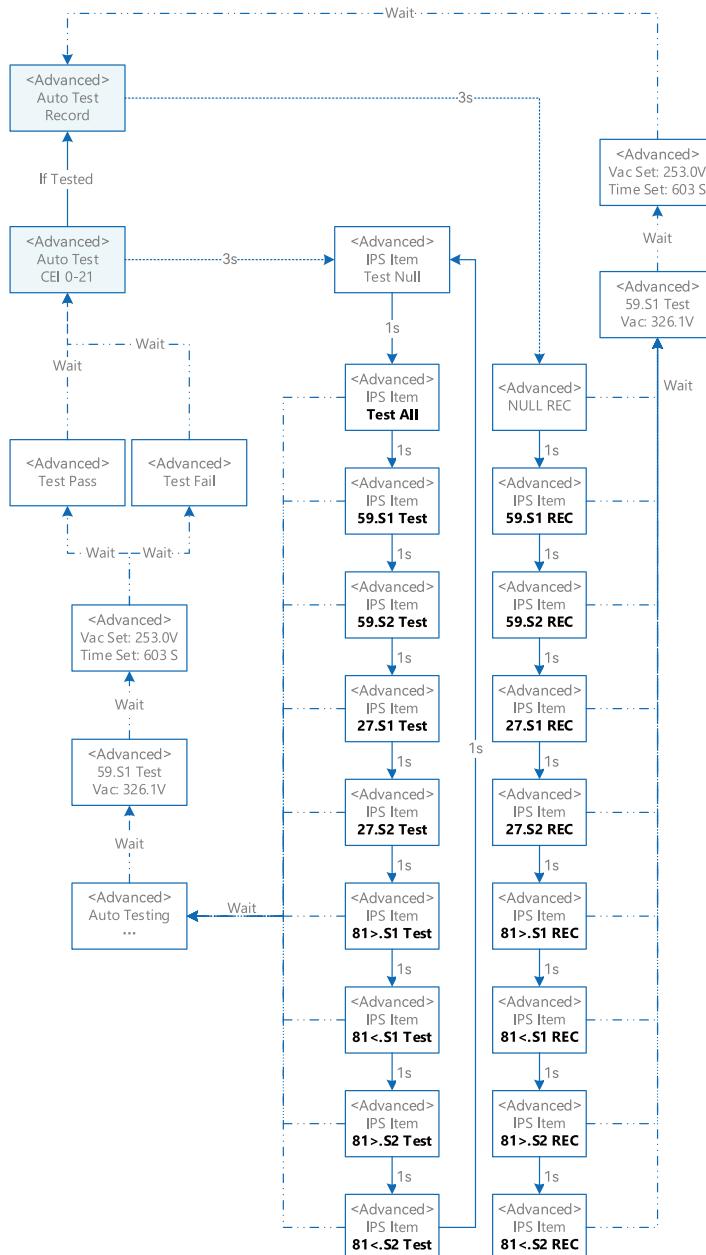

7.6 Reactive Power

The inverter provides a reactive power regulation function.

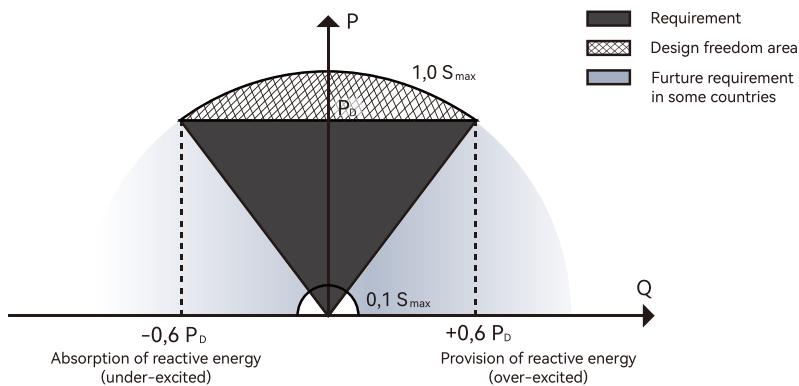


Figure 7-1 Capabilities

This mode can be enabled via configuration software. It is enabled by default in some regions, such as AU, DE market. For information on how to change default setpoints please contact Solinteg Technical Support at service@solinteg.com.

Descriptions of reactive power regulation mode:

Mode	Descriptions
Off	The PF is fixed at +1.000.
PF	The reactive power can be regulated by the parameter PF (Power Factor).
Qt	The reactive power can be regulated by the parameter Fixed Q (in Pn%).
Cosφ(P)	The PF changes with the output power of the inverter.
Q(U)	The reactive power changes with the grid voltage.

▼ 7.6.1 “Off” Modes

The reactive power regulation function is disabled. The PF is limited to +1.000.

▼ 7.6.2 “PF” Mode

— factor is fixed and reactive power setpoint is calculated according to the current power. The PF ranges from 0.8 leading to 0.8 lagging.

Leading: the inverter is sourcing reactive power to the grid.

Lagging: the inverter is injecting reactive power into the grid.

▼ 7.6.3 “Qt” Mode

In the Qt mode, system rated reactive power is fixed, and the system injects reactive power according to the delivered reactive power ratio.

The setting range of the reactive power ratio is -60%~60%, corresponding to the ranges of inductive and capacitive reactive power regulation respectively.

▼ 7.6.4 “Cosφ(P)” Mode

The PF of the inverter output varies in response to the output power of the inverter.

“Cosφ(P)” Mode Parameter Descriptions:

Parameter	Explanation	Range
Cosφ(P)_P1(Point A)	Output power at P1 on the Cosφ(P) mode curve (in percentage)	10% ~ 100%
Cosφ(P)_P2(Point B)	Output power at P2 on the Cosφ(P) mode curve (in percentage)	20% ~ 100%
Cosφ(P)_P3(Point C)	Output power at P3 on the Cosφ(P) mode curve (in percentage)	20% ~ 100%
Cosφ(P)_K1(Point A)	Power factor at P1 on the Cosφ(P) mode curve	
Cosφ(P)_K2(Point B)	Power factor at P2 on the Cosφ(P) mode curve	0.8 ~ 1
Cosφ(P)_K3(Point C)	Power factor at P3 on the Cosφ(P) mode curve	
Cosφ(P)_Enter-Voltage	Voltage percentage for Cosφ(P) function activation	100% ~ 110%
Cosφ(P)_Exit-Voltage	Voltage percentage for Cosφ(P) function deactivation	90% ~ 100%

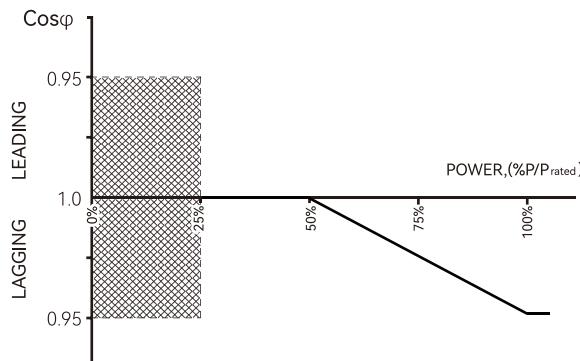


Figure 7-2 Cosφ(P) Curve

▼ 7.6.5 “Q(U)” Mode

The reactive power output of the inverter will vary in response to the grid voltage.

“Q(U)” Mode Parameter Descriptions:

Parameter	Explanation	Range
QU_V1	Grid voltage limit at P1 on the Q(U) mode curve	80% ~ 100%
QU_Q1	Value of Q/Sn at P1 on the Q (U) mode curve	0 ~ 60%
QU_V2	Grid voltage limit at P2 on the Q(U) mode curve	80% ~ 100%
QU_Q2	Value of Q/Sn at P2 on the Q (U) mode curve	-60% ~ 60%
QU_V3	Grid voltage limit at P3 on the Q(U) mode curve	100% ~120%
QU_Q3	Value of Q/Sn at P3 on the Q (U) mode curve	-60% ~ 60%
QU_V4	Grid voltage limit at P4 on the Q(U) mode curve	100% ~120%
QU_Q4	Value of Q/Sn at P4 on the Q(U) mode curve	0 ~ -60%
QU_Enter-Power	Active power for Q(U) function activation	20% ~ 100%
QU_Exit-Power	Active power for Q(U) function deactivation	1% ~ 20%

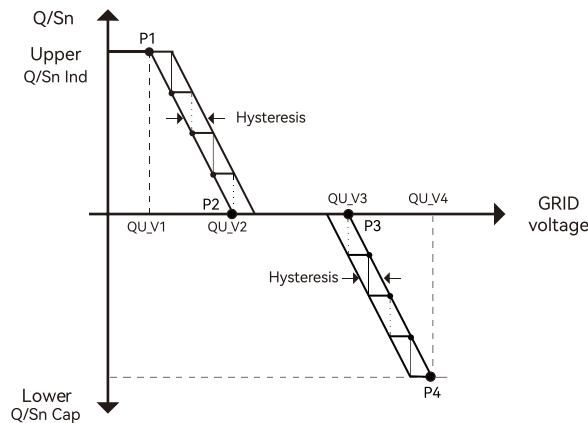


figure 7-3 Q(U) Curve


7.7 DI Ctrl

▼ 7.7.1 DRED

DRED function needs to be enabled via the OLED display.

First, set “Export Limit” to “ON” and set “Feed in Grid” to “100%”.

Then set “DI Ctrl” to “DRED”.

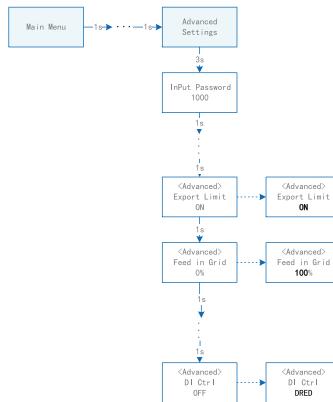


▼ 7.7.2 RCR

RCR function needs to be enabled via the OLED display.

First, set “Export Limit” to “ON” and set “Feed in Grid” to “100%”.

Then set “DI Ctrl” to “RCR”.

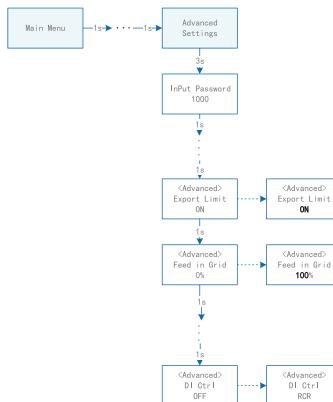

8 Monitoring

8.1 Monitoring Device

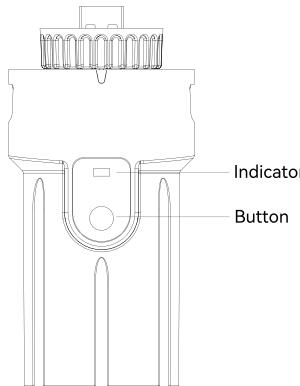


Figure 8-1 Monitoring device display interface

Indicator Status	Description
Off	Connection abnormal
Always On	Communicate with the server normally
Slow flashing	The monitoring device is not connected to the router or base station.
Quick flashing	The monitoring device is connected to the router or base station but not connected to the server.

Button	Description
Press 1 second	Reset device, the indicator goes off for 2 seconds, then flashes normally.
Press 5 second	Restore factory default settings, the indicator goes off for 2 seconds, then flashes once every 2 seconds, until the factory restore is completed.



NOTE

The WiFi module needs to be configured to the router for the first installation. If the router name or password are changed, the WiFi devices will need to be reconfigured. For details, please refer to the [QUICK USE GUIDE] which is attached to the accessory bag. If DHCP is enabled on the router, the LAN version module does not need to be configured. Otherwise, please refer to 7.2 General Setting to set IP/Gate way/Subnet Mask/DNS address.

8.2 Cloud Monitoring App

Solinteg inverter provides a monitoring port that can collect and transmit data from the inverter to Solinteg monitoring platform via an external monitoring device. Please refer to the product nameplate on side of enclosure to get the monitoring application. If download issues exist, contact your dealer or Solinteg technical support.

9 Troubleshooting

9.1 Error Message

Solinteg OGT-5~25K series On-Grid inverter is designed in accordance with grid operation standards, and conform to the requirements of safety and EMC. The inverter had passed a series of rigorous tests to ensure it runs sustainably and reliably before shipment.

When a fault occurs, the corresponding error message will be shown on the OLED display, and in this case, the inverter might stop feeding into grid. The fault messages and their corresponding troubleshooting methods are listed below:

Error Message	Description	Solution
Mains Lost	Grid power outage, AC switch or circuit is disconnected.	<ol style="list-style-type: none">1. Check whether the mains supply is lost.2. Check whether the AC cable wiring is correct.
Grid Voltage Fault	Inverter detects that the grid voltage exceeds the limit of selected safety set range.	<ol style="list-style-type: none">1. Check whether the safety code is correct.2. Check whether the AC cable wiring is correct.3. Check whether the voltage increased cause by large AC cable impedance. In this case we could replace with a thicker AC cable.4. Extend the voltage protection limit with the permission of the Electricity Authority.
Grid Frequency Fault	Inverter detects that the AC frequency exceeds the limit of selected safety set range. If occasional grid fluctuations lead to the fault, the inverter will recover automatically. (When the grid is stable.)	<ol style="list-style-type: none">1. Check whether the safety code is correct.2. Extend the voltage protection limit with the permission of the Electricity Authority.
DCI Fault	Inverter detects that the direct current injection value exceeds the range.	<ol style="list-style-type: none">1. Restart the inverter.2. Seek for help from the installer or manufacturer.
ISO Over Limitation	Inverter detects that DC side's insulation impedance to the ground is too low.	<ol style="list-style-type: none">1. Check whether PV panels, cables, and connectors are waterlogged or damaged.2. Use a megger to measure ground resistance on the DC side, and the measured value should not be less than 500 KΩ.3. Seek help from the installer or manufacturer.

Error Message	Description	Solution
GFCI Fault	The inverter detects that the ground leakage current exceeds the limitation.	1. Restart the inverter. 2. Check whether the PV panels, cables, and connectors are waterlogged or damaged. 3. Seek help from the installer or manufacturer.
PV Over Voltage	PV input voltage exceeds the upper limit.	1. Reduce the number of PV panels to make sure the open-circuit voltage of each string is lower than the inverter max allowed input voltage.
Bus Voltage Fault	The voltage of bus circuit is too high	1. Check whether the input voltage exceeds the limit. 2. Restart the inverter. 3. Seek help from the installer or manufacturer.
Over Temperature	The inverter detects its high internal temperature	1. Check whether the inverter installation location is well ventilated. 2. Try to turn it off for a while, and then power it back on when it cools down. 3. Seek help from the installer or manufacturer.
SPI Fault	Internal communication got failed. Caused by a strong external magnetic field etc.	1. Check whether the inverter installation location is well ventilated. 2. Try to turn it off for a while, and then power it back on when it cools down. 3. Seek help from the installer or manufacturer.
E2 Fault	Internal storage got abnormal. Cause by a strong external magnetic field etc.	1. Restart the inverter. 2. Seek help from the installer or manufacturer.
GFCI Device Fault	GFCI device got abnormal	1. Restart the inverter. 2. Seek help from the installer or manufacturer.

Error Message	Description	Solution
AC Transducer Fault	AC transducer got abnormal	<ol style="list-style-type: none">1. Restart the inverter.2. Seek help from the installer or manufacturer.
Relay Check Fail	Self-checking of internal relay got failed. Neutral & ground cable are in poor connection on AC side.	<ol style="list-style-type: none">1. Use multimeter to measure the voltage between N&PE cable on AC side. If the voltage is higher than 10V, which means the neutral or ground connection is abnormal.2. restart the inverter.3. Seek help from the installer or manufacturer.

9.2 Inverter Maintenance



DANGER

Incorrect operation do cause the risk of inverter damage or personal injury.

Please strictly follow the steps below.

- ① select 'stop' option on inverter screen or monitoring app to shut down inverter.
- ② Turn off the AC breaker on utility grid side.
- ③ Turn off inverter DC switch.
- ④ Turn off the battery switch, and disconnect the DC breaker on the battery side (if any).
- ⑤ Wait for 10 minutes to ensure the energy of capacitor is fully dissipated.
- ⑥ Confirm all the indicator lights are off.



CAUTION

Keep unprofessional person away.

A temporary alarm sign or barrier must be posted to keep unprofessional person away while performing electrical connection and maintenance.



NOTICE

Any Arbitrary replacement of internal components is forbidden.

Please seek help from Solinteg for maintenance support. Otherwise, we will not take any responsibility.



NOTE

Please remember not to do the self-maintenance before being familiar with the proper instruction of the whole process.

Items	Methods	Period
System clean	Check dust or foreign matter on the heat-sink, air inlet and outlet.	Once 6-12 months
Electrical connection	Check whether the cables are in good connection.	Once 6-12 months
Sealing	Check whether all the terminals and ports are properly sealed. Reseal the cable hole if it is aging or not sealed.	Once a year

10 Appendix

10.1 Technical Parameters

Model	OGT-5K	OGT-6K
PV Input		
Start-up voltage (V)	180	180
Max. DC input voltage (V)*	1100*	1100*
Rated DC input voltage (V)	620	620
Operating voltage range*	160~950*	160~950*
Rated power MPP voltage range (V)	175~850	210~850
No. of MPP trackers	2	2
No. of DC inputs per MPPT	1/1	1/1
Max. input current (A)	15/15	15/15
Max. short-circuit current (A)	20/20	20/20
Grid Side		
Rated output power (kW)	5.0	6.0
Max. output power (kW)	5.0	6.0
Rated output apparent power (kVA)	5.0	6.0
Max. output apparent power (kVA)	5.0	6.0
Rated AC voltage (V)	3L/N/PE, 220/380V; 230/400V; 240/415V	
Rated AC frequency (Hz)	50/60	50/60
Rated output current (A)	7.6/7.2/6.9	9.1/8.7/8.3
Max. output current (A)	7.6	9.1
Power factor	0.8 leading ...0.8 lagging	
Max. total harmonic distortion	<3% @Rated output power	
DCI	<0.5%ln	<0.5%ln
Efficiency		
Max. efficiency	98.1%	98.3%

Model	OGT-5K	OGT-6K
Efficiency		
European efficiency	97.9%	98.0%
MPPT efficiency	99.9%	99.9%
Protection		
DC reverse polarity protection		Integrated
Insulation resistance protection		Integrated
Surge protection		Integrated
Over-temperature protection		Integrated
Residual current protection		Integrated
Islanding protection		Integrated
AC over-voltage protection	Integrated (Frequency shift)	
Overload protection		Integrated
Power factor		Integrated
AC short-circuit protection		Integrated
General Data		
Over voltage category	PV: II; Main: III	
Dimensions (mm)	465*335*200(W*H*D)	
Weight (KG)	19	19
Protection degree	IP66	IP66
Self-consumption at night (W)	<1	<1
Topology	Transformerless	
Operating Temperature range (°C)	-30~60	-30~60
Relative Humidity (%)	0~100	0~100
Operating Altitude (m)	3000 (>3000m derating)	
Cooling	Natural Convection	
Noise Level (dB)	<25	<25
Display	OLED & LED	
Communication	RS485/WiFi/LAN/4G (Optional)	

Model	OGT-8K	OGT-8K-P	OGT-10K	OGT-10K-P
PV Input				
Start-up voltage (V)	180	180	180	180
Max. DC input voltage (V)*	1100*	1100*	1100*	1100*
Rated DC input voltage (V)	620	620	620	620
Operating voltage range*	160~950*	160~950*	160~950*	160~950*
Rated power MPP voltage range (V)	280~850	190~850	350~850	235~850
No. of MPP trackers	2	3	2	3
No. of DC inputs per MPPT	1/1	1/1/1	1/1	1/1/1
Max. input current (A)	15/15	15/15/15	15/15	15/15/15
Max. short-circuit current (A)	20/20	20/20/20	20/20	20/20/20
Grid Side				
Rated output power (kW)	8.0	8.0	10.0	10.0
Max. output power (kW)	8.0	8.0	10.0	10.0
Rated output apparent power (kVA)	8.0	8.0	10.0	10.0
Max. output apparent power (kVA)	8.0	8.0	10.0	10.0
Rated AC voltage (V)	3L/N/PE, 220/380V; 230/400V; 240/415V			
Rated AC frequency (Hz)	50/60	50/60	50/60	50/60
Rated output current (A)	12.1/11.6/11.1	12.1/11.6/11.1	15.2/14.5/13.9	15.2/14.5/13.9
Max. output current (A)	12.1	12.1	15.2	15.2
Power factor	0.8 leading ...0.8 lagging			
Max. total harmonic distortion	<3% @Rated output power			
DCI	<0.5%ln	<0.5%ln	<0.5%ln	<0.5%ln
Efficiency				
Max. efficiency	98.3%	98.3%	98.6%	98.6%
European efficiency	98.0%	98.0%	98.2%	98.2%
MPPT efficiency	99.9%	99.9%	99.9%	99.9%

Model	OGT-8K	OGT-8K-P	OGT-10K	OGT-10K-P
Protection				
DC reverse polarity protection	Integrated			
Insulation resistance protection	Integrated			
Surge protection	Integrated			
Over-temperature protection	Integrated			
Residual current protection	Integrated			
Islanding protection	Integrated			
AC over-voltage protection	Integrated (Frequency shift)			
Overload protection	Integrated			
Power factor	Integrated			
AC short-circuit protection	Integrated			
General Data				
Over voltage category	PV: II; Main: III			
Dimensions (mm)	465*335*200(W*H*D)			
Weight (KG)	19	21	19	21
Protection degree	IP66	IP66	IP66	IP66
Self-consumption at night (W)	<1	<1	<1	<1
Topology	Transformerless			
Operating Temperature range (°C)	-30~60	-30~60	-30~60	-30~60
Relative Humidity (%)	0~100	0~100	0~100	0~100
Operating Altitude (m)	3000 (>3000m derating)			
Cooling	Natural Convection			
Noise Level (dB)	<25	<25	<25	<25
Display	OLED & LED			
Communication	RS485/WiFi/LAN/4G (Optional)			

Model	OGT-12K	OGT-12K-P	OGT-15K	OGT-15K-P
PV Input				
Start-up voltage (V)	180	180	180	180
Max. DC input voltage (V)*	1100*	1100*	1100*	1100*
Rated DC input voltage (V)	620	620	620	620
Operating voltage range*	160~950*	160~950*	160~950*	160~950*
Rated power MPP voltage range (V)	280~850	215~850	355~850	265~850
No. of MPP trackers	3	3	3	3
No. of DC inputs per MPPT	1/1/1	1/1/2	1/1/1	1/1/2
Max. input current (A)	15/15/15	15/15/30	15/15/15	15/15/30
Max. short-circuit current (A)	20/20/20	20/20/40	20/20/20	20/20/40
Grid Side				
Rated output power (kW)	12.0	12.0	15.0	15.0
Max. output power (kW)	12.0	12.0	15.0	15.0
Rated output apparent power (kVA)	12.0	12.0	15.0	15.0
Max. output apparent power (kVA)	12.0	12.0	15.0	15.0
Rated AC voltage (V)	3L/N/PE, 220/380V; 230/400V; 240/415V			
Rated AC frequency (Hz)	50/60	50/60	50/60	50/60
Rated output current (A)	18.2/17.4/16.7	18.2/17.4/16.7	22.7/21.7/20.8	22.7/21.7/20.8
Max. output current (A)	18.2	18.2	22.7	22.7
Power factor	0.8 leading ...0.8 lagging			
Max. total harmonic distortion	<3% @Rated output power			
DCI	<0.5%ln	<0.5%ln	<0.5%ln	<0.5%ln
Efficiency				
Max. efficiency	98.6%	98.6%	98.6%	98.6%
European efficiency	98.2%	98.2%	98.2%	98.2%
MPPT efficiency	99.9%	99.9%	99.9%	99.9%

Model	OGT-12K	OGT-12K-P	OGT-15K	OGT-15K-P
Protection				
DC reverse polarity protection	Integrated			
Insulation resistance protection	Integrated			
Surge protection	Integrated			
Over-temperature protection	Integrated			
Residual current protection	Integrated			
Islanding protection	Integrated			
AC over-voltage protection	Integrated (Frequency shift)			
Overload protection	Integrated			
Power factor	Integrated			
AC short-circuit protection	Integrated			
General Data				
Over voltage category	PV: II; Main: III			
Dimensions (mm)	465*335*200(W*H*D)			
Weight (KG)	21	21	21	24
Protection degree	IP66	IP66	IP66	IP66
Self-consumption at night (W)	<1	<1	<1	<1
Topology	Transformerless			
Operating Temperature range (°C)	-30~60	-30~60	-30~60	-30~60
Relative Humidity (%)	0~100	0~100	0~100	0~100
Operating Altitude (m)	3000 (>3000m derating)			
Cooling	Natural Convection	Smart Fan	Natural Convection	Smart Fan
Noise Level (dB)	<25	<40	<25	<40
Display	OLED & LED			
Communication	RS485/WiFi/LAN/4G (Optional)			

Model	OGT-20K	OGT-25K
PV Input		
Start-up voltage (V)	180	180
Max. DC input voltage (V)*	1100*	1100*
Rated DC input voltage (V)	620	620
Operating voltage range*	160-950*	160-950*
Rated power MPP voltage range (V)	355-850	430-850
No. of MPP trackers	3	3
No. of DC inputs per MPPT	1/1/2	1/1/2
Max. input current (A)	15/15/30	15/15/30
Max. short-circuit current (A)	20/20/40	20/20/40
Grid Side		
Rated output power (kW)	20.0	25.0
Max. output power (kW)	20.0	25.0
Rated output apparent power (kVA)	20.0	25.0
Max. output apparent power (kVA)	20.0	25.0
Rated AC voltage (V)	3L/N/PE, 220/380V; 230/400V; 240/415V	
Rated AC frequency (Hz)	50/60	50/60
Rated output current (A)	30.3/29/27.8	37.9/36.2/34.7
Max. output current (A)	30.3	37.9
Power factor	0.8 leading ...0.8 lagging	
Max. total harmonic distortion	<3% @Rated output power	
DCI	<0.5%ln	<0.5%ln
Efficiency		
Max. efficiency	98.6%	98.6%
European efficiency	98.2%	98.2%
MPPT efficiency	99.9%	99.9%

Model	OGT-20K	OGT-25K
Protection		
DC reverse polarity protection		Integrated
Insulation resistance protection		Integrated
Surge protection		Integrated
Over-temperature protection		Integrated
Residual current protection		Integrated
Islanding protection		Integrated
AC over-voltage protection		Integrated (Frequency shift)
Overload protection		Integrated
Power factor		Integrated
AC short-circuit protection		Integrated
General Data		
Over voltage category	PV: II; Main: III	
Dimensions (mm)	465*335*200(W*H*D)	
Weight (KG)	24	24
Protection degree	IP66	IP66
Self-consumption at night (W)	<1	<1
Topology	Transformerless	
Operating Temperature range (°C)	-30~60	-30~60
Relative Humidity (%)	0~100	0~100
Operating Altitude (m)	3000 (>3000m derating)	
Cooling	Smart Fan	
Noise Level (dB)	<40	
Display	OLED & LED	
Communication	RS485/WiFi/LAN/4G (Optional)	

* PV Max. Input voltage is 950V, otherwise inverter will be waiting.

** Max .input current of each string of PV should not exceed 20A; Max.input current of each MPPT should not exceed 40A.

10.2 Contact Information

Should you have any question about this product, please contact us.

We need the following information to provide you with the best assistance:

- Model of the device
- Serial number of the device
- Date of the device
- Fault code/name
- Brief description of the problem

China (HQ)

Solinteg Power Co., Ltd.

Address: Building H1-1001, No. 6 Jingxian Road, Xinwu District, 214135 Wuxi, Jiangsu Province, China

Website: www.solinteg.com

Service Mail: service@solinteg.com

INTEGRATE SOLAR INTELLIGENTLY



www.solinteg.com



M11-00017-02